




AIR HYDRAULIC BOTTLE JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : AHBJ50000

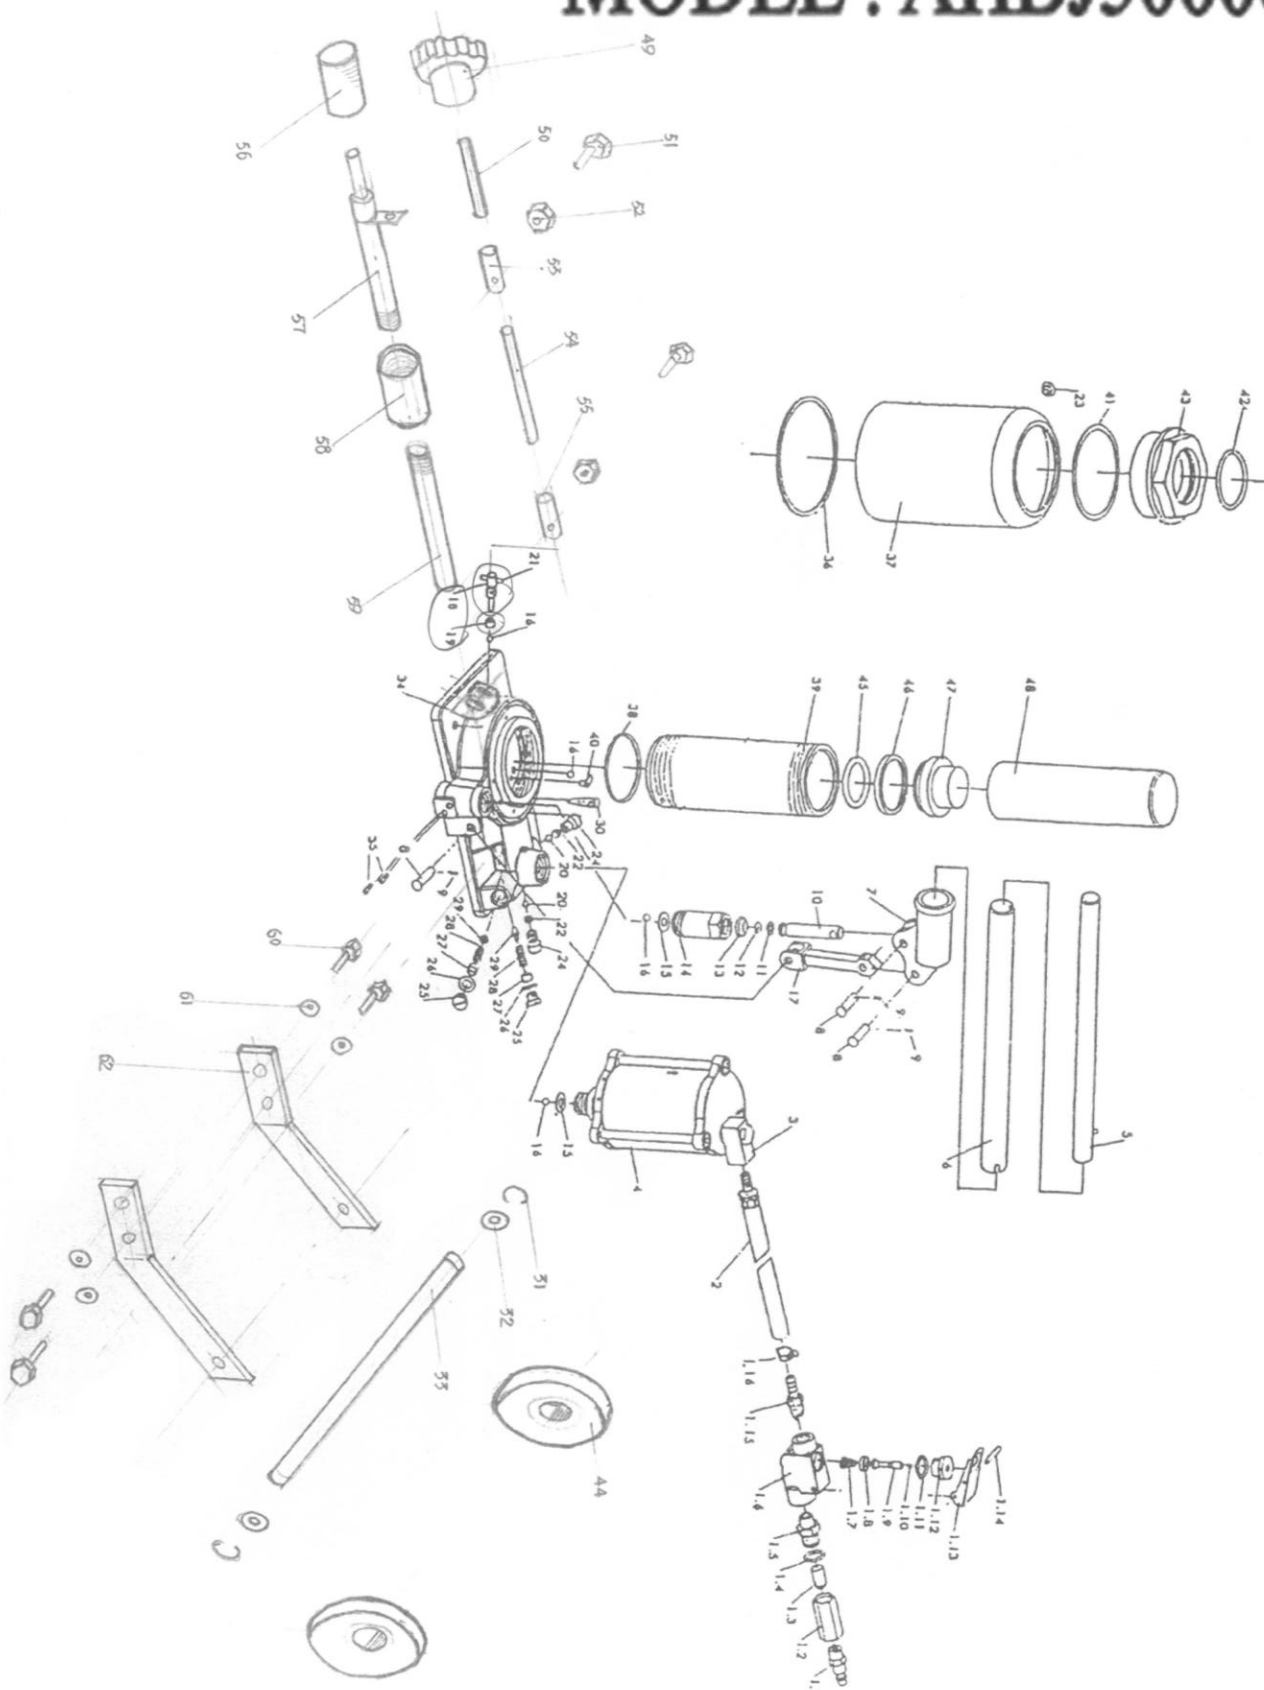



AIR HYDRAULIC BOTTLE JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : AHBJ50000

PART LIST

No	Stock Code	Description	QTY	No	Stock Code	Description	QTY
1.1		Hose Connector	1	25		Plug Screw	2
1.2		Connecting Nut	1	26		Plung Washer	2
1.3		Air Filter	1	27		Overload Valve Screw	2
1.4		"O" Ring 18x24	1	28		Safety Valve Spring	2
1.5		Connector	1	29		Overload Tapering Valve	2
1.6		Valve body	1	30		Filter Net	2
1.7		Spring	1	31		Spring Washer 8	2
1.8		Packing	1	32		Nut 8	2
1.9		Throttle	1	33		Bolt M8x35	2
1.10		"O" Ring 3x1.6	1	34		Base	2
1.11		"O" Ring 18x2.4	1	35		Plug Screw	4
1.12		Nut	1	36		Cylinder Bottom Seal	1
1.13		Level	1	37		Reservoir	1
1.14		Level Rin	1	38		Packing	1
1.15		Hose Connector	2	39		Cylinder	1
1.16		Hose Band	1	40		Steel Ball Retainer	2
2		Air Hose	1	41		Cylinder Top Seal	1
3		Connector	1	42		"O" Ring	1
4		Air Pump	1	43		Top Nut	1
5		Handle Upper	1	44		Extension Screw	1
6		Handle Lower	1	45		"O" Ring	1
7		Pluger	1	46		"O" Ring Returner	1
8		Shaft Pin	3	47		Ram Header	1
9		Cotter Pin	3	48		Ram	1
10		Pump Plunger	1	49		Spring	2
11		Pump Plunger Retainer	1	50		Spring Plate	2
12		"O" Ring	1	51		M4 Screw	2
13		Dust Proof Ring	1	52		M4 Nut	2
14		Pump Reservoir	1	53		Connector 1	1
15		Copper Washer	1	54		Oil Valve	1
16		Steel Ball 6	6	55		Connector 2	1
17		Plunger Convectoring Rod	1	56		Plastic Handle Sleeve	1
18		Release Valve Screw	1	57		Upper Handle	1
19		Release Valve Seal	1	58		Handle Connected	1
20		Steel Ball 6.35	1	59		Lower Handle	1
21		Pin	1	60		M8 Bolt	4
22		Valve Spring	2	61		Ø8 Flat Washer	4
23		Filler Plug	1	62		Wheel Carrier Board	2
24		Screw	2		TRS50TABJ	Seals	