




5/10 TON LONG FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : LFJ5000/LFJ10000

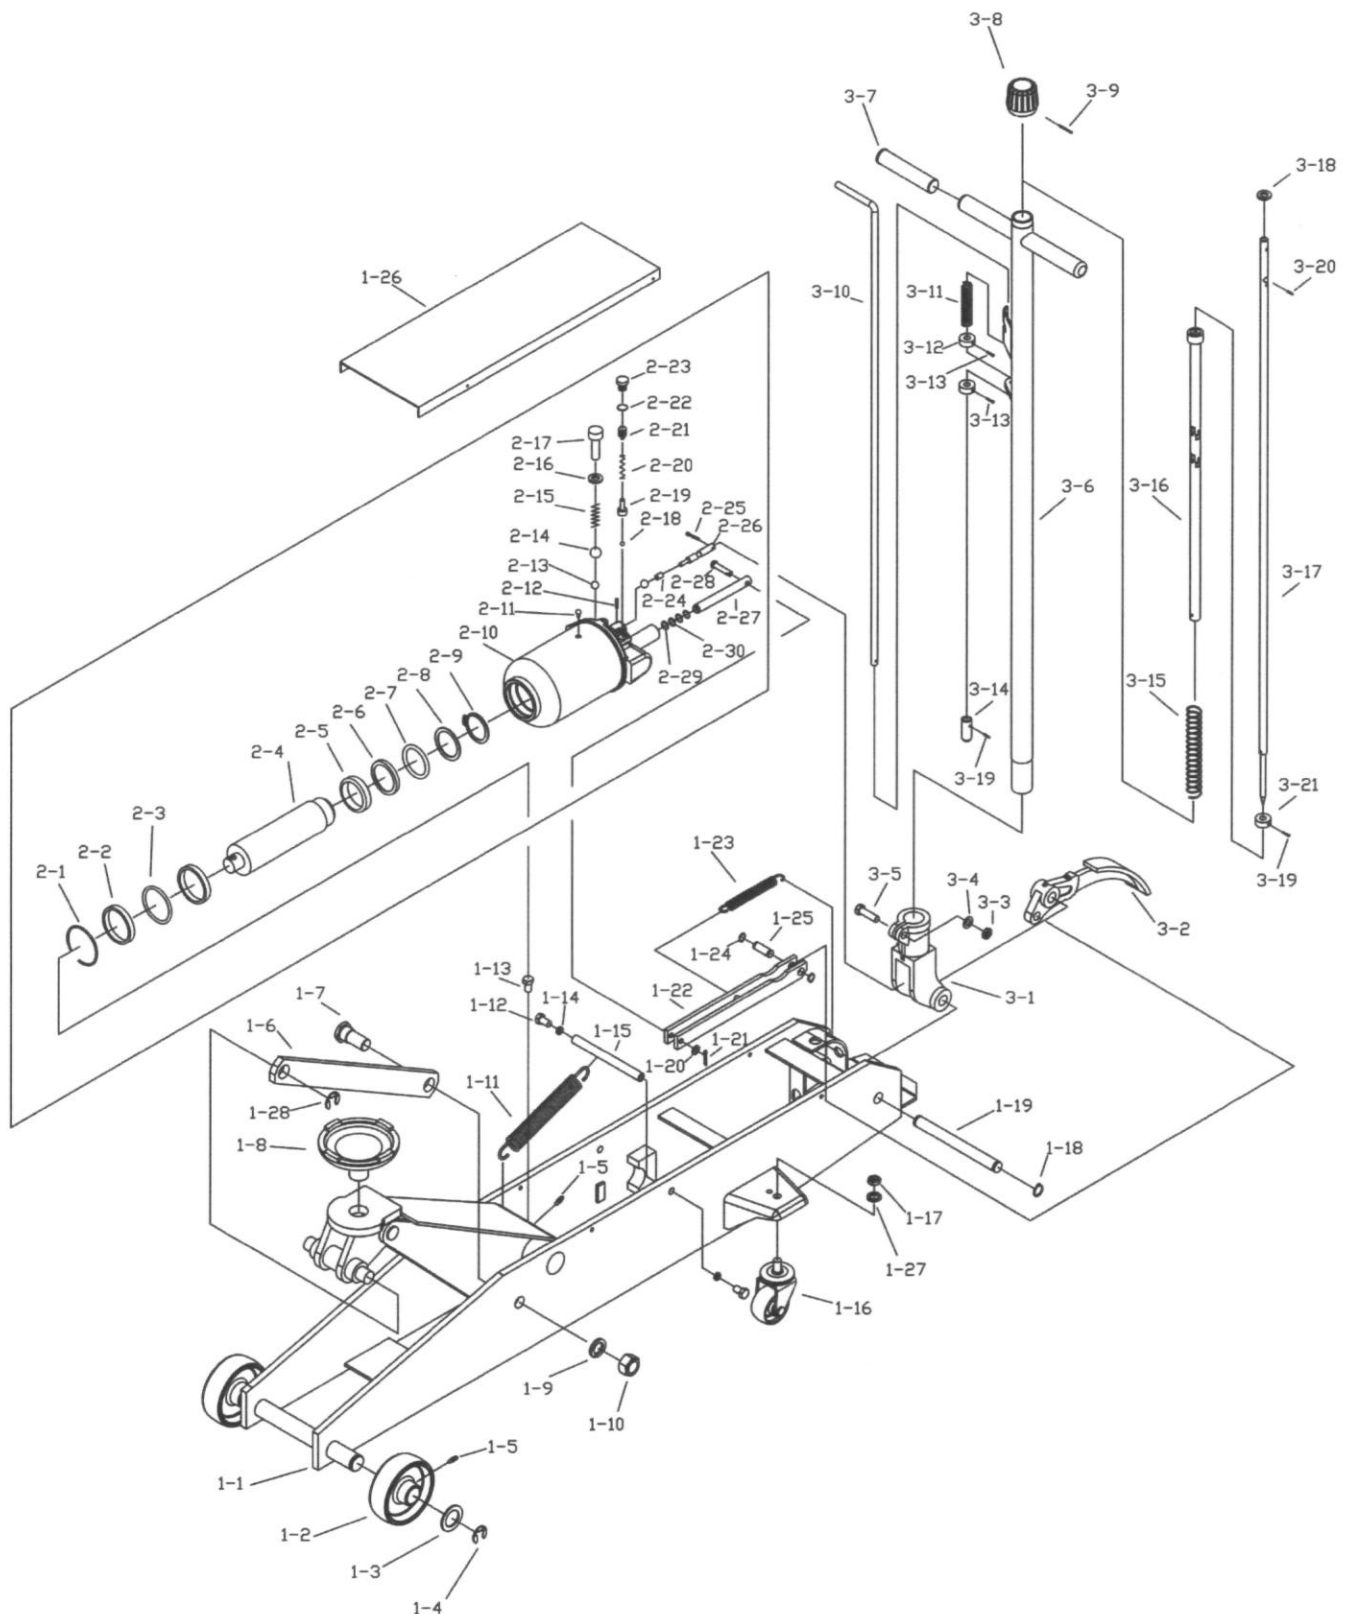



5/10 TON LONG FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : LFJ5000/LFJ10000

Part	Stock Code	Description	Qty	Part No	Stock Code	Description	Qty
1-1		Frame	1	2-13		Steel ball $\Phi 6$	1
1-2		Front wheel	2	2-14		Steel ball $\Phi 9$	1
1-3		Washer	2	2-15		Spring	1
1-4		Snap ring	2	2-16		Copper washer	1
1-5		Grease fitting	3	2-17		Bolt M12x20	1
1-6		Rod link	2	2-18		Steel ball	1
1-7		Bolt	2	2-19		Valve seat	1
1-8		Saddle	1	2-20		Spring	1
1-9		Lock washer	2	2-21		Screw	1
1-10		Nut	2	2-22		O-ring	1
1-11		Spring	1	2-23		Safety valve screw	1
1-12		Bolt M10x25	2	2-24	TRS5TLFJ	Seals	1
1-13		Bolt M10x16	1	2-25		Pin	1
1-14		Snap ring	2	2-26		Release Valve rod	1
1-15		Shaft	1	2-27		Cylinder pump	1
1-16		Washer	2	2-28		Pin	1
1-17		Nut	2	2-29		O-ring	1
1-18		Snap ring	2	2-30		Nylon gasket	2
1-19		Shaft	1	3-1		Handle socket	1
1-20		Washer	1	3-2		Pedal	1
1-21		Pin	1	3-3		Nut M10	1
1-22		Connection bar	1	3-4		Washer	1
1-23		Spring	1	3-5		Bolt M10x35	1
1-24		Snap ring	2	3-6		Handle	1
1-25		Shaft	1	3-7		Handle sleeve	2
1-26		Cover board	1	3-8		Knob	1
1-27		Lock washer	2	3-9		Pin	1
1-28		Snap ring	2	3-10		Control rod	1
2-1		Snap ring	2	3-11		Spring	1

Part	Stock Code	Description	Qty	Part No	Stock Code	Description	Qty
2-2		Washer	1	3-12		Washer	2
2-3		O-ring	1	3-13		Screw	2
2-4		Piston rod	1	3-14		Rod joint	1
2-5		Piston ring	1	3-15		Spring	1
2-6		Sealing washer	1	3-16		Universal joint ass'y	1
2-7		O-ring	1	3-17		Conver rod	1
2-8		O- ring retainer	1	3-18		Washer	1
2-9		Snap ring	1	3-19		Pin	2
2-10		Oil cylinder ass'y	1	3-20		Pin	1
2-11		Oil filler plug	1	3-21		Washer	1
2-12		Pin	2		LFJ5000BW		

Note: Parts 1-27 and 1-28 are only available on 10TON models.