





2 STAGE
 HYDRAULIC TRANSMISSION JACK
 OPERATING INSTRUCTIONS MANUAL

MODEL : TJ1000

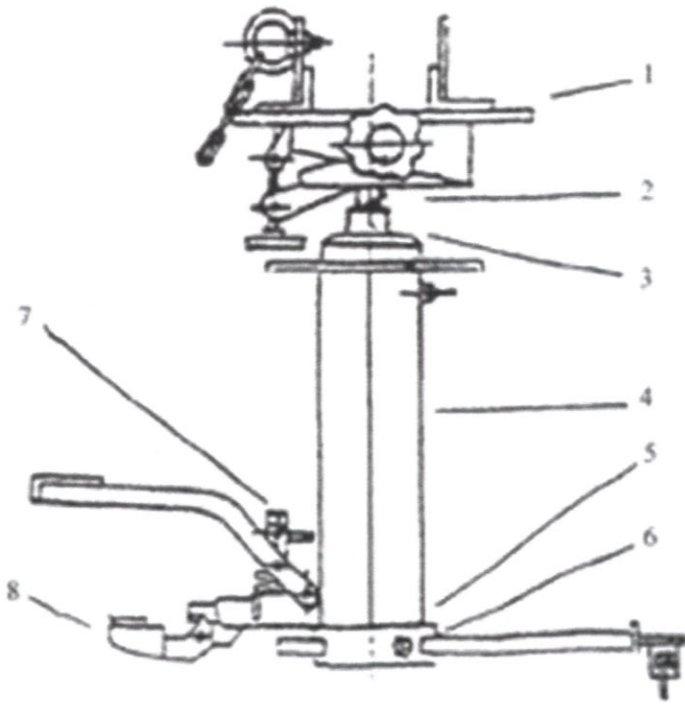

No	Description
1	Saddle
2	2# Ram
3	1# Ram
4	Cylinder
5	Wheel Stand
6	Bolt
7	Foot Operated Pump
8	Put Oil

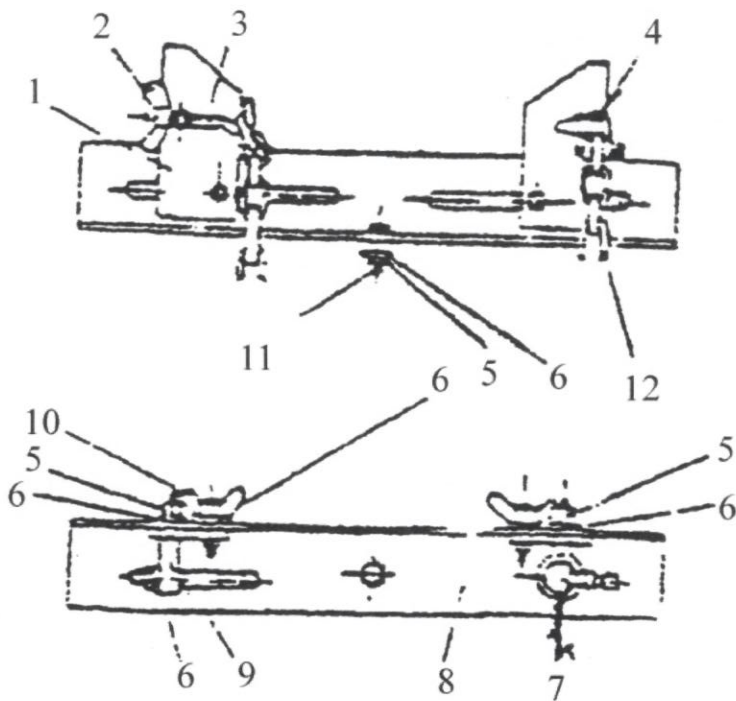

No	Description
1	Connection
2	Butterfly Nut
3	Chain Hook
4	Chain Tip
5	Nut
6	Washer
7	Collar Bolt
8	Corner Steel
9	Bolt
10	Butterfly Bolt
11	Bolt
12	Chain