




35 TON AIR FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : TRHAFJ35000

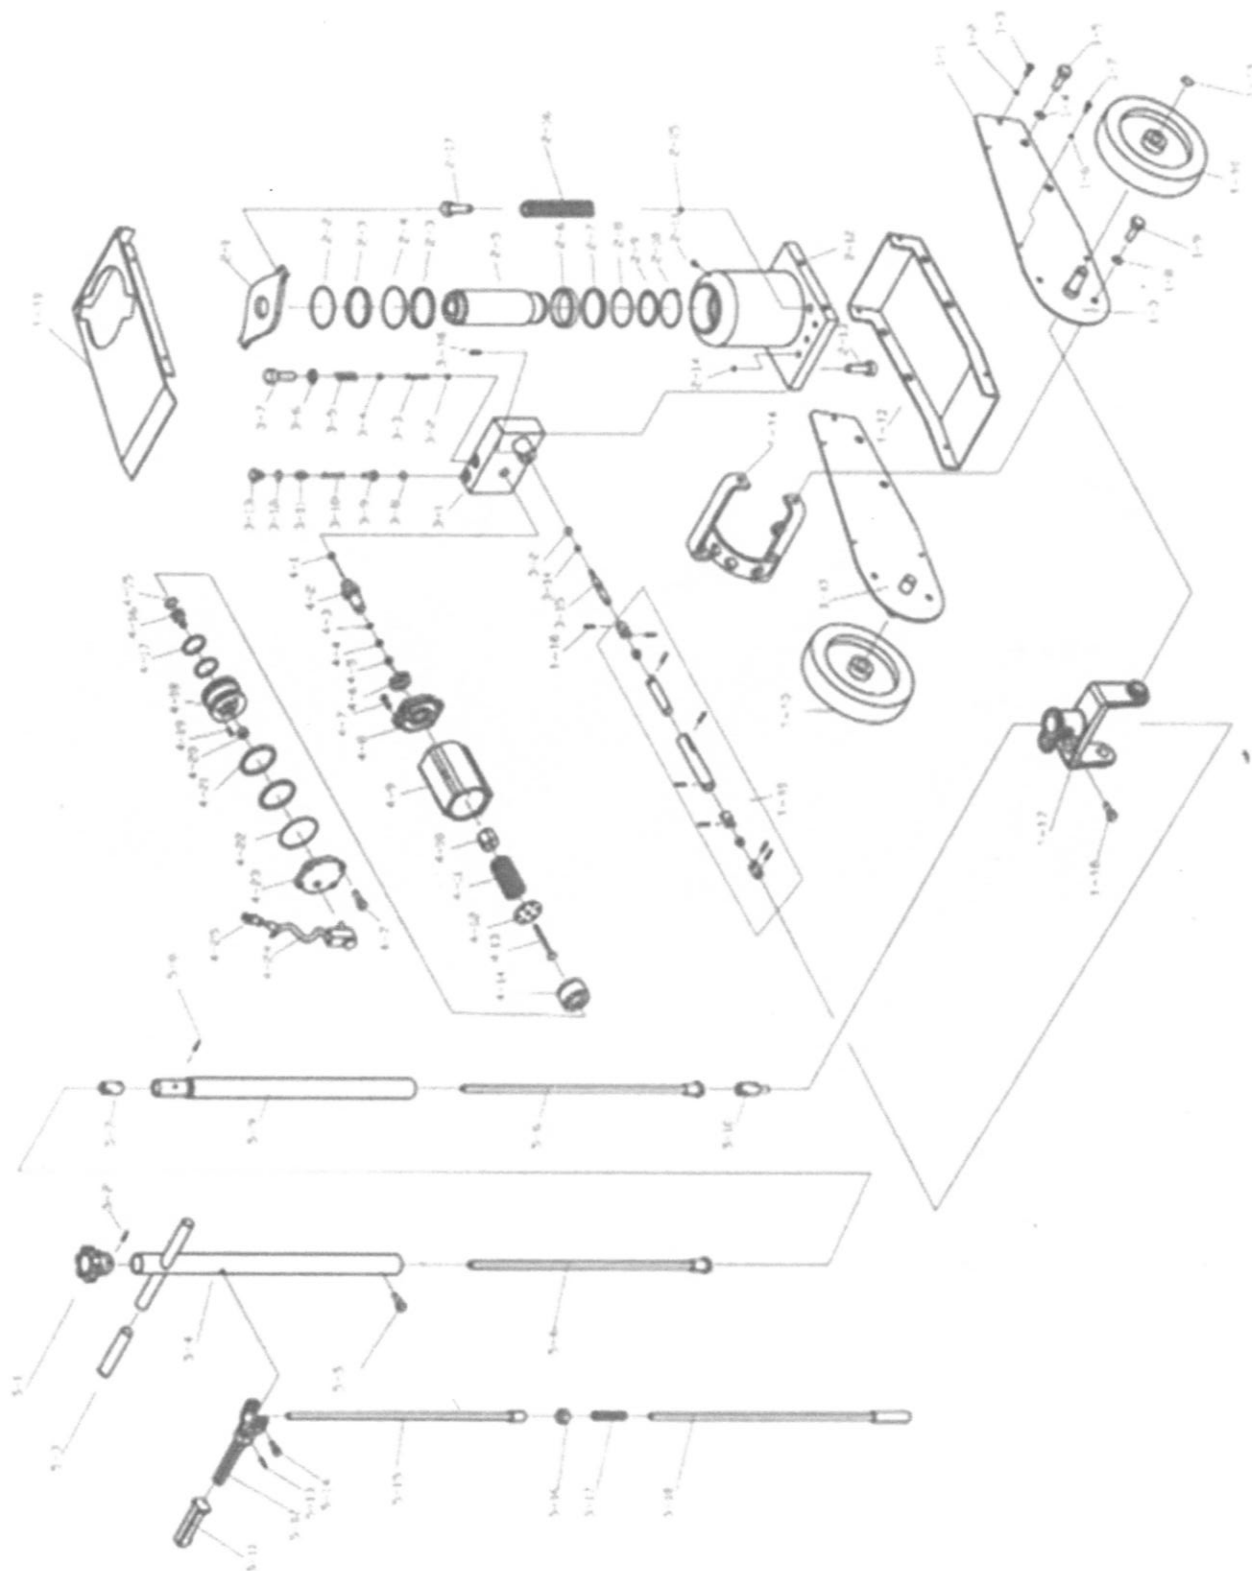



35 TON AIR FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : TRHAFJ35000

Item	Code	Description	Qty	Part No	Code	Description	Qty
1-1		Frame right	1	2-12		Cylinder	1
1-2		Washer	4	2-13		Screw	3
1-3		Bolt	4	2-14		O-ring	3
1-4		Washer	4	2-15		Nut	2
1-5		Bolt	4	2-16		Spring	2
1-6		Washer	4	2-17		Bolt	2
1-7		Bolt	4	3-1		Valve block	1
1-8		Lock washer	4	3-2		Steel ball	2
1-9		Bolt	4	3-3		Spring	1
1-10		Wheel	2	3-4		Steel ball	1
1-11		Snap ring	2	3-5		Spring	1
1-12		Bed	1	3-6		Copper washer	1
1-13		Frame left	1	3-7		Bolt	1
1-14		Bracket	1	3-8		Steel ball	1
1-15		Universal joint ass'y	1	3-9		Ball seat	1
1-16		Pin	1	3-10		Spring	1
1-17		Handle socket	1	3-11		Screw	1
1-18		Bolt	1	3-12		Sealing washer	1
1-19		Cover board	1	3-13		Valve plug screw	1
2-1		Spring cover	1	3-14		Sealing washer	1
2-2		Lock washer	1	3-15		Release valve rod	1
2-3		Ring	2	3-16		Pin	1

2-4		o-ring	1	4-1		Copper washer	1
2-5		Pisten rod	1	4-2		Cylinder pump	1
2-6		Pisten ring	1	4-3		y- sealing washer	1
2-7		Washer	1	4-4		Nylon washer	1
2-8		O-ring	1	4-5		Copper washer	1
2-9		Washer	1	4-6		Nut	1
2-10		Snap ring	1	4-7		Bolt	8
2-11		Oil plug	1	4-8		Front cover	1

Item	Code	Description	Qty	Part No	Code	Description	Qty
4-9		Air pump housing	1	5-2		Pin	1
4-10		Hex nut	1	5-3		Handle Sleeve	2
4-11		Spring	1	5-4		Front Handle	1
4-12		Washer	1	5-5		Bolt	1
4-13		Pump plunger	1	5-6		Convey Rod	2
4-14		Piston body A	1	5-7		Rod Joint	1
4-15		o-ring	1	5-8		Pin	1
4-16		Air shuttle valve	1	5-9		Rear Handle	1
4-17		o-ring	2	5-10		Rod Joint	1
4-18		Piston body B	1	5-11		Sleeve	1
4-19		Bolt	3	5-12		Lock Lever	1
4-20		Shuttle valve seal	1	5-13		Pin	1
4-21		o-ring	2	5-14		Bolt	2
4-22		o-ring	1	5-15		Front Control Rod	1
4-23		Rear cover	1	5-16		Nut	1
4-24		Air hose ass'y	1	5-17		Spring	1
4-25		Air valve	1	5-18		Rear Control Rod	1
5-1		Knob	1		AFJ35RKS	Repair Kit Set	
					TRS35TAFJ	Seal Kit Set	