




22 TON AIR FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : TRAFJ22000

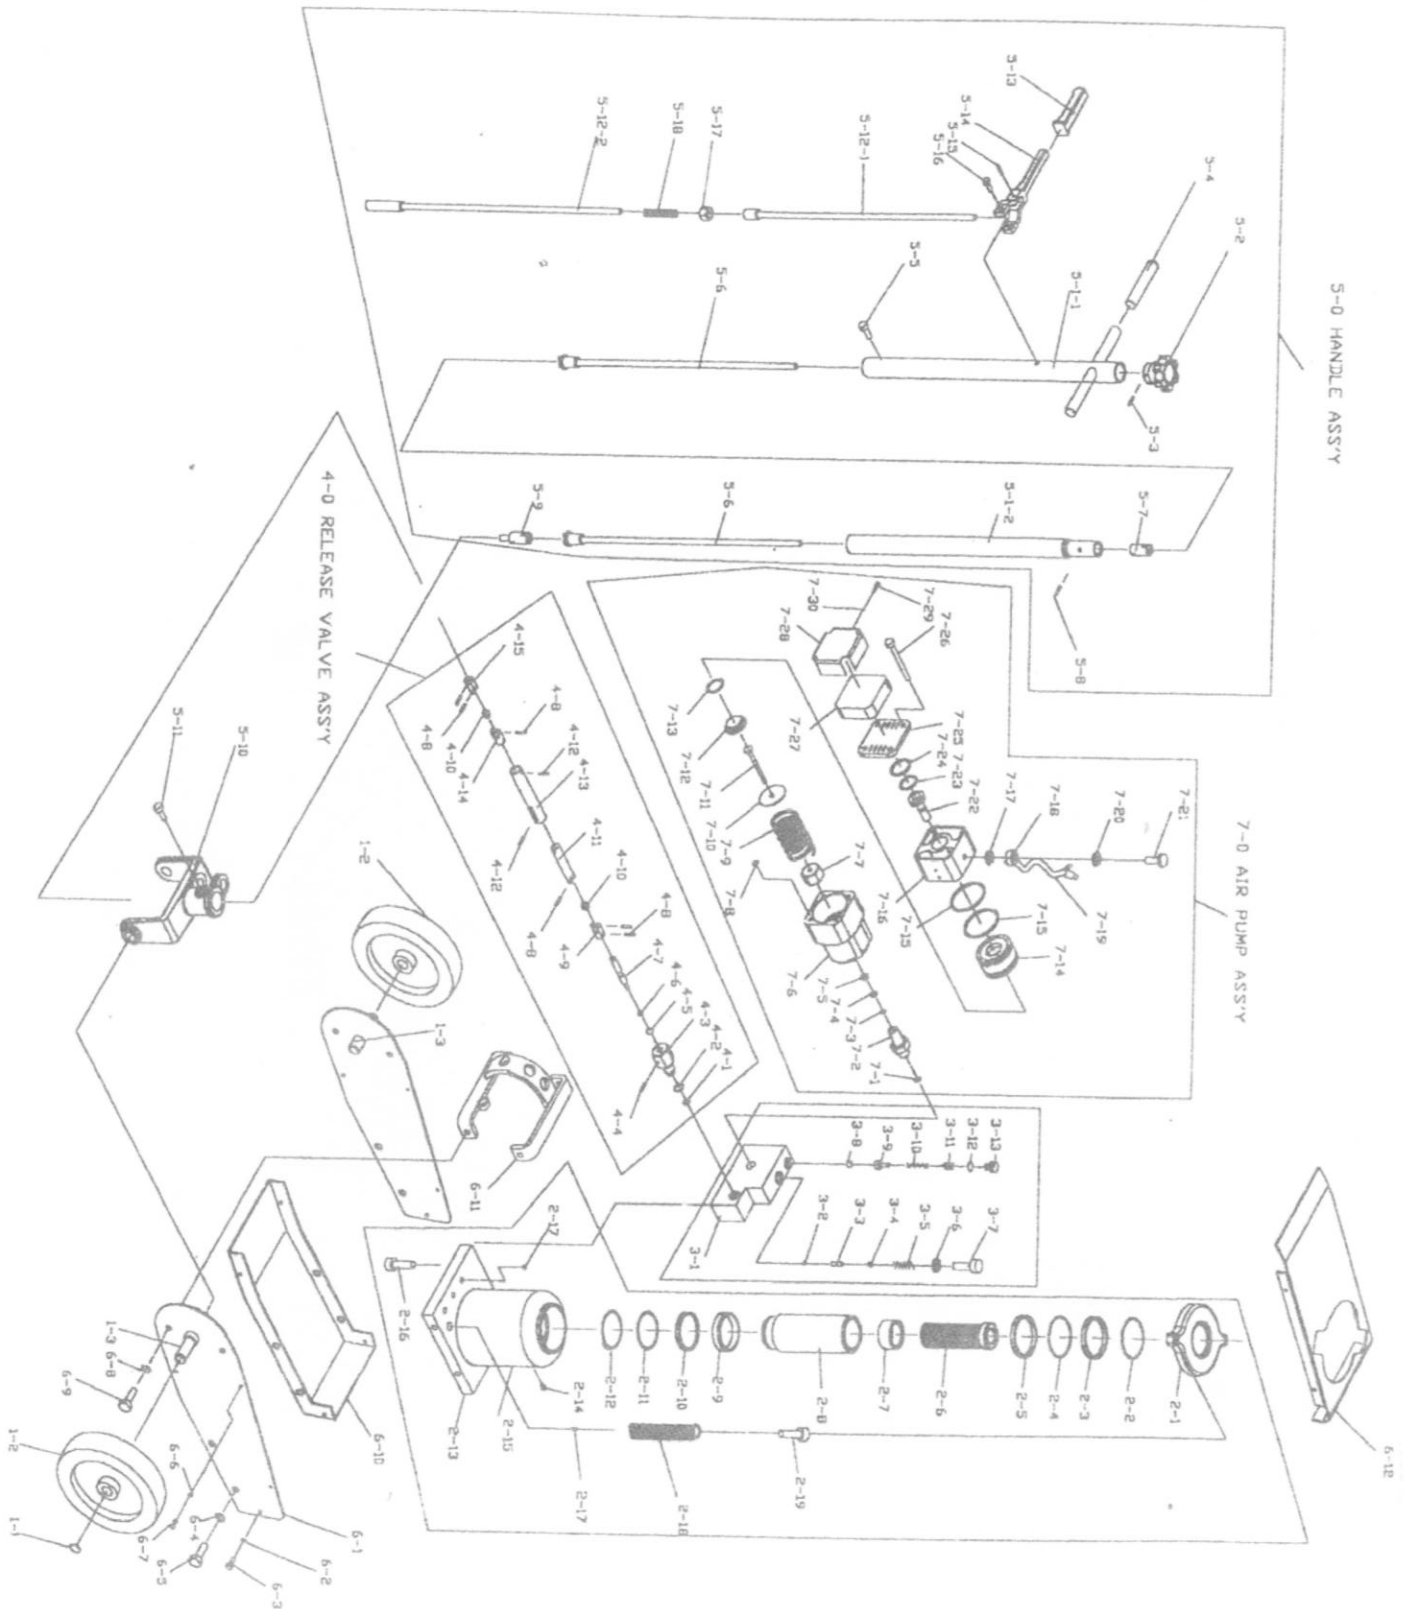



22 TON AIR FLOOR JACK

OPERATING INSTRUCTIONS MANUAL

MODEL : TRAFJ22000

Part	Stock Code	Description	Qty	Part No	Stock Code	Description	Qty
1-1		Snap Ring	2	3-11		Screw	1
1-2		Wheel	2	3-12		Sealing Washer	1
1-3		Wheel Shaft	2	3-13		Valve Plug Screw	1
2-1		Spring Hunger	1	4-0		Release Valve Assy	
2-2		Snap Ring	1	4-1		Copper Washer	1
2-3		Bushing	1	4-2		O-ring	1
2-4		O-ring	1	4-3		Release Valve	1
2-5		Bushing	1	4-4		Pin	1
2-6		Screw	1	4-5		Steel Ball	1
2-7		Bushing	1	4-6		Sealing Washer	1
2-8		Piston Rod	1	4-7		Release Valve Rod	1
2-9		Piston Ring	1	4-8		Rivet	2
2-10		O-ring	1	4-9		Universal Joint A	1
2-11		Washer	1	4-10		Block	2
2-12		Snap Ring	1	4-11		Universal Joint B	1
2-13		Bed	1	4-12		Pin	2
2-14		Oil Filter Plug	1	4-13		Pipe	1
2-15		Housing	1	4-14		Universal Joint C	1
2-16		Screw	3	4-15		Universal Joint D	1
2-17		O-ring	3	5-0		Handle Assy	
3-1		Valve Block	1	5-1-1		Handle A	1
3-2		Steel Ball	1	5-1-2		Handle B	1
3-3		Pin	1	5-2		Knob	1
3-4		Steel Ball	1	5-3		Pin	1
3-5		Spring	1	5-4		Handle Sleeve	2
3-6		Copper Washer	1	5-5		Screw	1
3-7		Screw	1	5-6		Convey Rod	2
3-8		Steel Ball	1	5-7		Convey Block	1
3-9		Spring Seat	1	5-8		Pin	1
3-10		Spring	1	5-9		Rod Joint	1

Part No	Stock Code	Description	Qty	Part No	Stock Code	Description	Qty
5-10		Handle Socket	1	7-5		Copper Washer	1
5-11		Hex Bolt	1	7-6		Air Pump Body	1
5-12-1		Control Rod A	1	7-7		Nut	1
5-12-2		Control Rod B	1	7-8		O-ring	1
5-13		Handle Sleeve	1	7-9		Spring	1
5-14		Lock Lever	1	7-10		Washer	1
5-15		Pin	1	7-11		Pump Plunger	1
5-16		Screw	2	7-12		Washer	1
5-17		Hex Nut	1	7-13		O-ring	1
5-18		Spring	1	7-14		Piston	1
6-1		Frame	2	7-15		O-ring	2
6-2		Washer	4	7-16		Air Pump Bed	1
6-3		Screw	4	7-17		Copper Joint Ring	1
6-4		Spring Washer	4	7-18		Copper Joint	1
6-5		Hex Bolt	4	7-19		Air Hose	1
6-6		Washer	4	7-20		Washer	1
6-7		Screw	4	7-21		Bolt	1
6-8		Spring Washer	4	7-22		Release Air Rod	1
6-9		Hex Bolt	4	7-23		O-ring	1
6-10		Bed	1	7-24		O-ring	1
6-11		Bracket	1	7-25		Air Pump Cover	1
7-0		Air Pump Assy		7-26		Screw	4
7-1		Copper Washer	1	7-27		Filter	1
7-2		Cylinder Pump	1	7-28		Filter Cover	1
7-3		"Y" Sealing Washer	1	7-29		Screw	4
7-4		Nylon Washer	1	7-30		Washer	4
					TRS22TAFJ	Seals	