




0.5 TON  
HYDRAULIC TRANSMISSION JACK  
OPERATING INSTRUCTIONS MANUAL  
MODEL : TRHTJ500



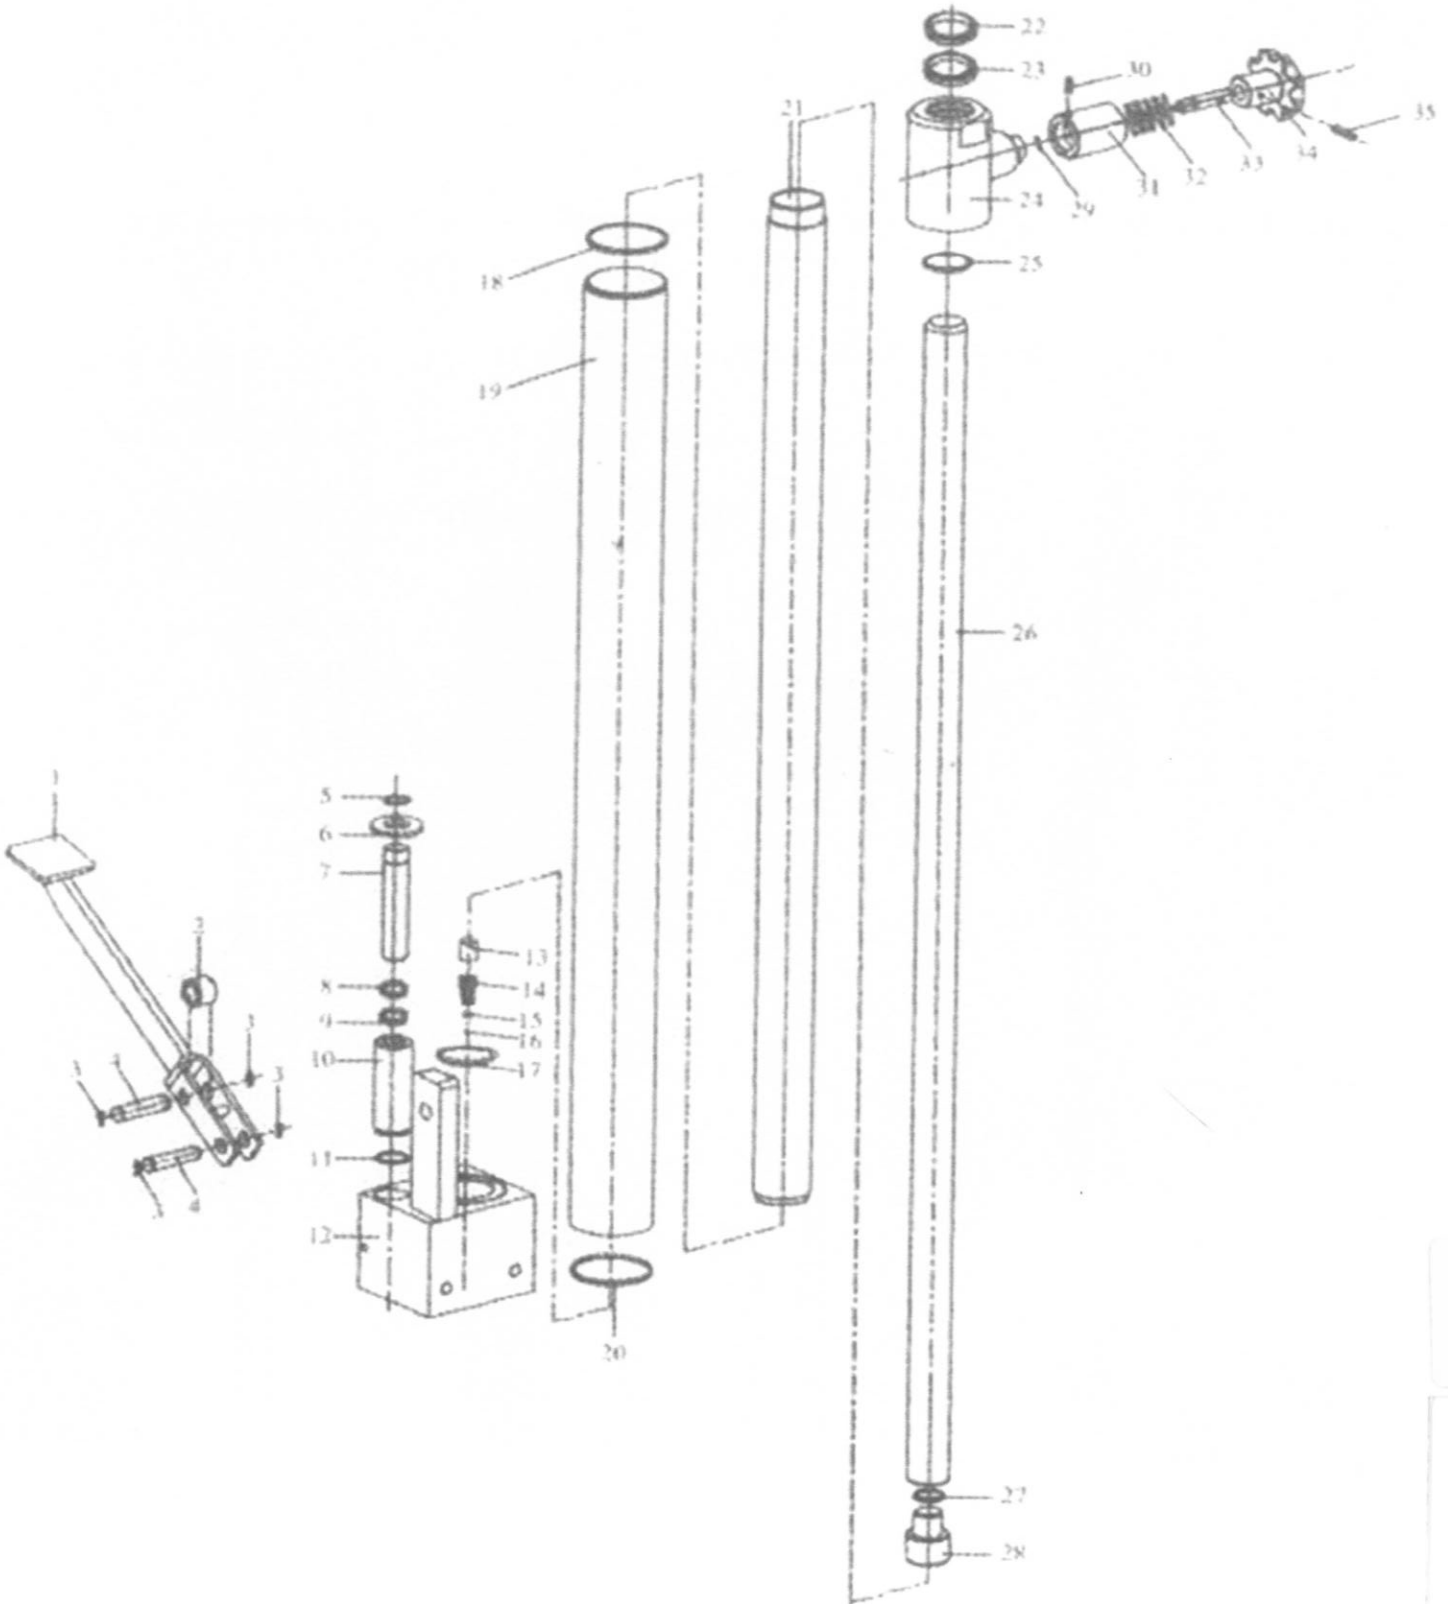

HYDRAULIC TRANSMISSION JACK  
OPERATING INSTRUCTIONS MANUAL

MODEL : TRHTJ500

Item	Code	Description	Qty	Item	Code	Description	Qty
1		Pedal	1	19		Housing	1
2		Roller	1	20		Seal Washer	1
3		Snap Ring	4	21		Cylinder	1
4		Pin Spindle	2	22		Dust Ring	1
5		Spring Washer	1	23		Y-seal	1
6		Spring Washer	1	24		Cylinder Cap	1
7		Pump Core	1	25		O-ring	1
8		Dust Ring	1	26		Piston Rod	1
9		Y-seal	1	27		Spring Washer	1
10		Pump	1	28		Piston	1
11		Seal Washer	1	29		O-ring	1
12		Pump Body	1	30		Bolt	1
13		Perforation Nut	1	31		Spring Cap	1
14		Subulate Spring	1	32	PET05EA#4	Spring	1
15		Steel Ball	1	33		Strike Pin	1
16		Steel Ball	1	34		Knob	1
17		Seal Washer	1	35		Pin	1
18		Seal Washer	1				